

# 1

## General operation:

**1.On-starting display :** After Install batteries in the gauge, press SET key then current pressure is displayed.

**2.Pressure zero-reset :** Once the pressure is displayed, press zero Shift key for 3 seconds to reset the pressure value to zero.

**3.For other operations and setting, see below.**

# 2

## Functions of keys:

**A.Key definitions : the three keys on the front panel.**

- 1.On/Off key:the key on the left.(shift key)
- 2.Light/P-H key:'the key in the middle.(Setting key)
- 3.Resrt key:the key on the right.(ADJ key)

**B.Parameter setting mode :** Press In /Off key first then press Light / P-Ht key to enter the parameter setting mode. For details of operation,see (3) Parameter setting mode.

**C.Changing pressure unites :** Press On /Off to change unit.

**D.To turn on or turn off backlight just press Light / P-H key once.**

**E.Display Max. pressure :**

- 1.Press the Light / P-H key for 3 seconds,and the LCD displays Max. pressure, with the"Max"icon on top right of LCD blinking.
- 2.Press Light / P-H key for 3 seconds again to restore to the display of normal working status.

**F. Zero-reset the Max. Pressure:**

While pressure appear Max. Pressure, press reset key for 3 seconds, and the LCD displays"- - - -", and 1 second later, the Max.pressure is reset at zero.

**G. Zero-reset the pressure value:**

When pressure is displayed, press reset key for 3 seconds, and the current pressure value is reset at zero.

# 3

## Parameter setting mode:

**A.Item 1: Zero mask setting**

- 1.Parameter setting mode: Press On/ Off key first then press Light / P-Ht key to enter the parameter setting mode.
- 2.The first Item in setting mode sets unit for Zero mask, where the screen displays"Cut.X".
- 3.Use reset key to adjust numeric of X,X mean 1~9.

**B.Item 2: Setting Automatic shut-down**

- 1.Press Light / P-H key again to enter the second item of automatic shut-down settingmode, where the screen displays" LCD.X ".
- 2.Use reset key to adjust numeric of X, X mean 1~9.

**C.Item 3:Setting Automatic shut down Backlight**

- 1.Press Light / P-H key again to enter the third item of automatic shut-down Backlight setting mode, where the screen displays " LCD.X ".
- 2.Use reset key to adjust numeric of X, X mean 1~9.

**D.Complete the setting-save the setting:**

- 1.Press Light / P-H key again; now the set values saved.
- 2.Then the display of normal working status return.

**Undersea Centre Ltd**  
SERVING THE DIVING INDUSTRY SINCE 1974

info@undersea-centre.co.uk undersea-centre.co.uk 023 8235 8111

